SCOSCHE®

TA2041

2004 TOYOTA SOLARA KIT

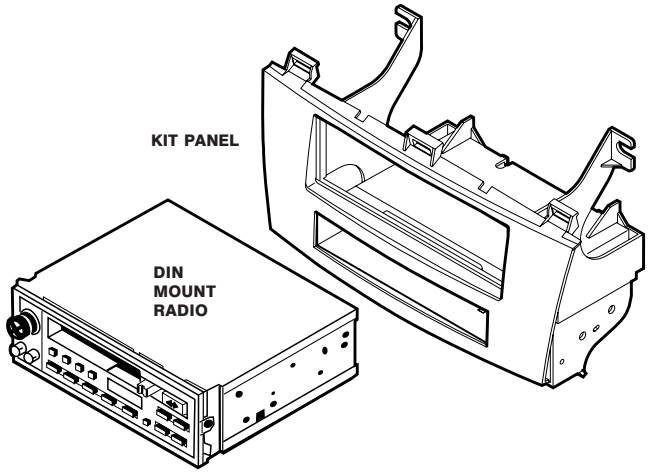

INTRODUCTION / PRELIMINARY

Thank you for purchasing the Scosche TA2041 Kit. This kit was manufactured with the highest of quality standards.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

VEHICLE DISASSEMBLY

2004 TOYOTA SOLARA

RADIO REMOVAL AND IN-DASH INSTALLATION

1. Using Philip screw driver remove 2 screws in an upward angle at bottom edge of radio and A/C control bezel.
2. Using panel removal tool pop out radio dash bezel and remove.
3. Using Philip screw driver remove 4 screws from radio disconnect amd remove.

WIRE CODES

For Factory Wiring Codes go to: www.scosche-cars.com or call.

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit in the listed vehicles. Manufacturer cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions call:

TECH HELP 1-800-621-3695x3

© 2004 SCOSCHE INDUSTRIES, INC.

SI 4/04-TA2041 (3000003)

SCOSCHE®

TA2041

2004 TOYOTA SOLARA KIT

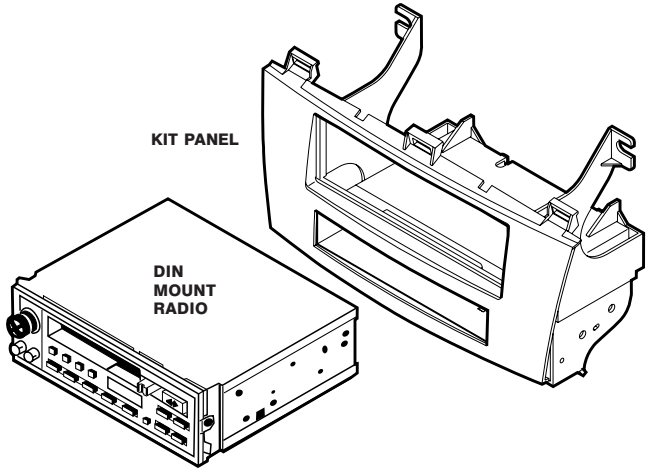

INTRODUCTION / PRELIMINARY

Thank you for purchasing the Scosche TA2041 Kit. This kit was manufactured with the highest of quality standards.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

VEHICLE DISASSEMBLY

2004 TOYOTA SOLARA

RADIO REMOVAL AND IN-DASH INSTALLATION

1. Using Philip screw driver remove 2 screws in an upward angle at bottom edge of radio and A/C control bezel.
2. Using panel removal tool pop out radio dash bezel and remove.
3. Using Philip screw driver remove 4 screws from radio disconnect amd remove.

WIRE CODES

For Factory Wiring Codes go to: www.scosche-cars.com or call.

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit in the listed vehicles. Manufacturer cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions call:

TECH HELP 1-800-621-3695x3

© 2004 SCOSCHE INDUSTRIES, INC.

SI 4/04-TA2041 (3000003)